


FIVE FOOT CONCRETE SIDEWALK NEW POUR WHEN  
TERREWALKS® PAVERS HAVE BEEN CUT

A-- Use dowels drilled into pavers  
(in conditions needing some extra stability)

B-- Use restraints and pour over them  
(in conditions needing most extra stability)

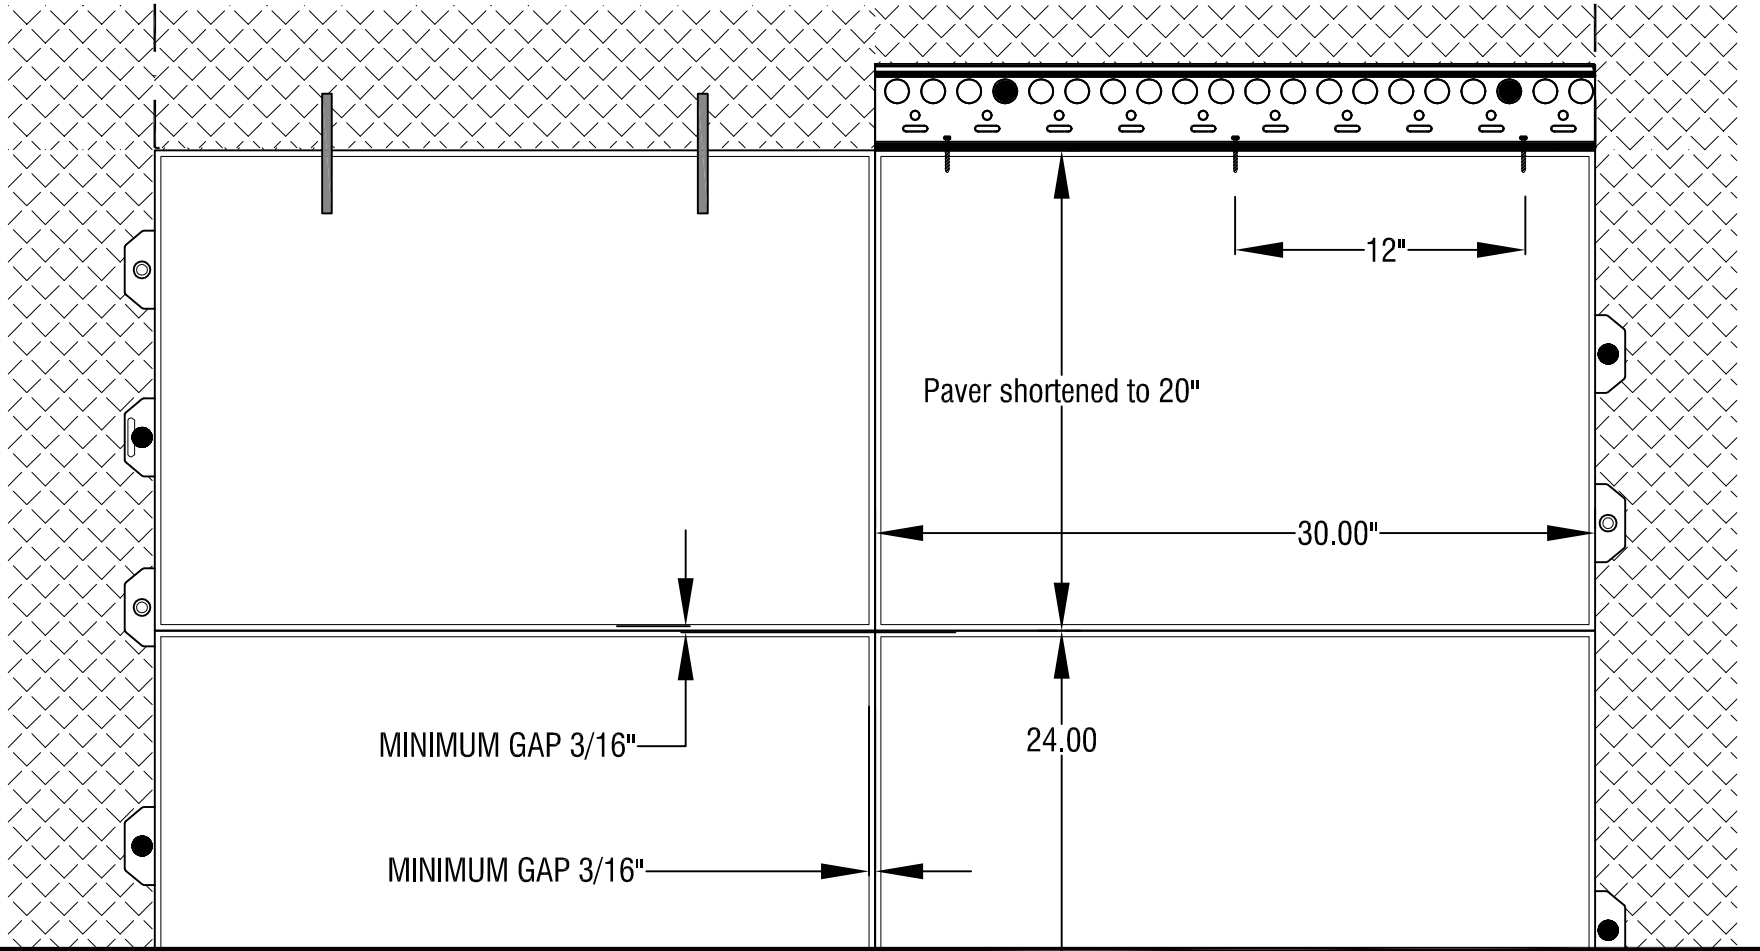


PAVERS ARE CUT  
Scale: 1-1/2" = 1'-0"

FIVE FOOT CONCRETE SIDEWALK NEW POUR  
ABUTTING TERREWALKS® FULL SIZE

A-- Leave the tabs and pour over them  
(in normal conditions)

B-- Use restraints and pour over them  
(in conditions needing extra stability)

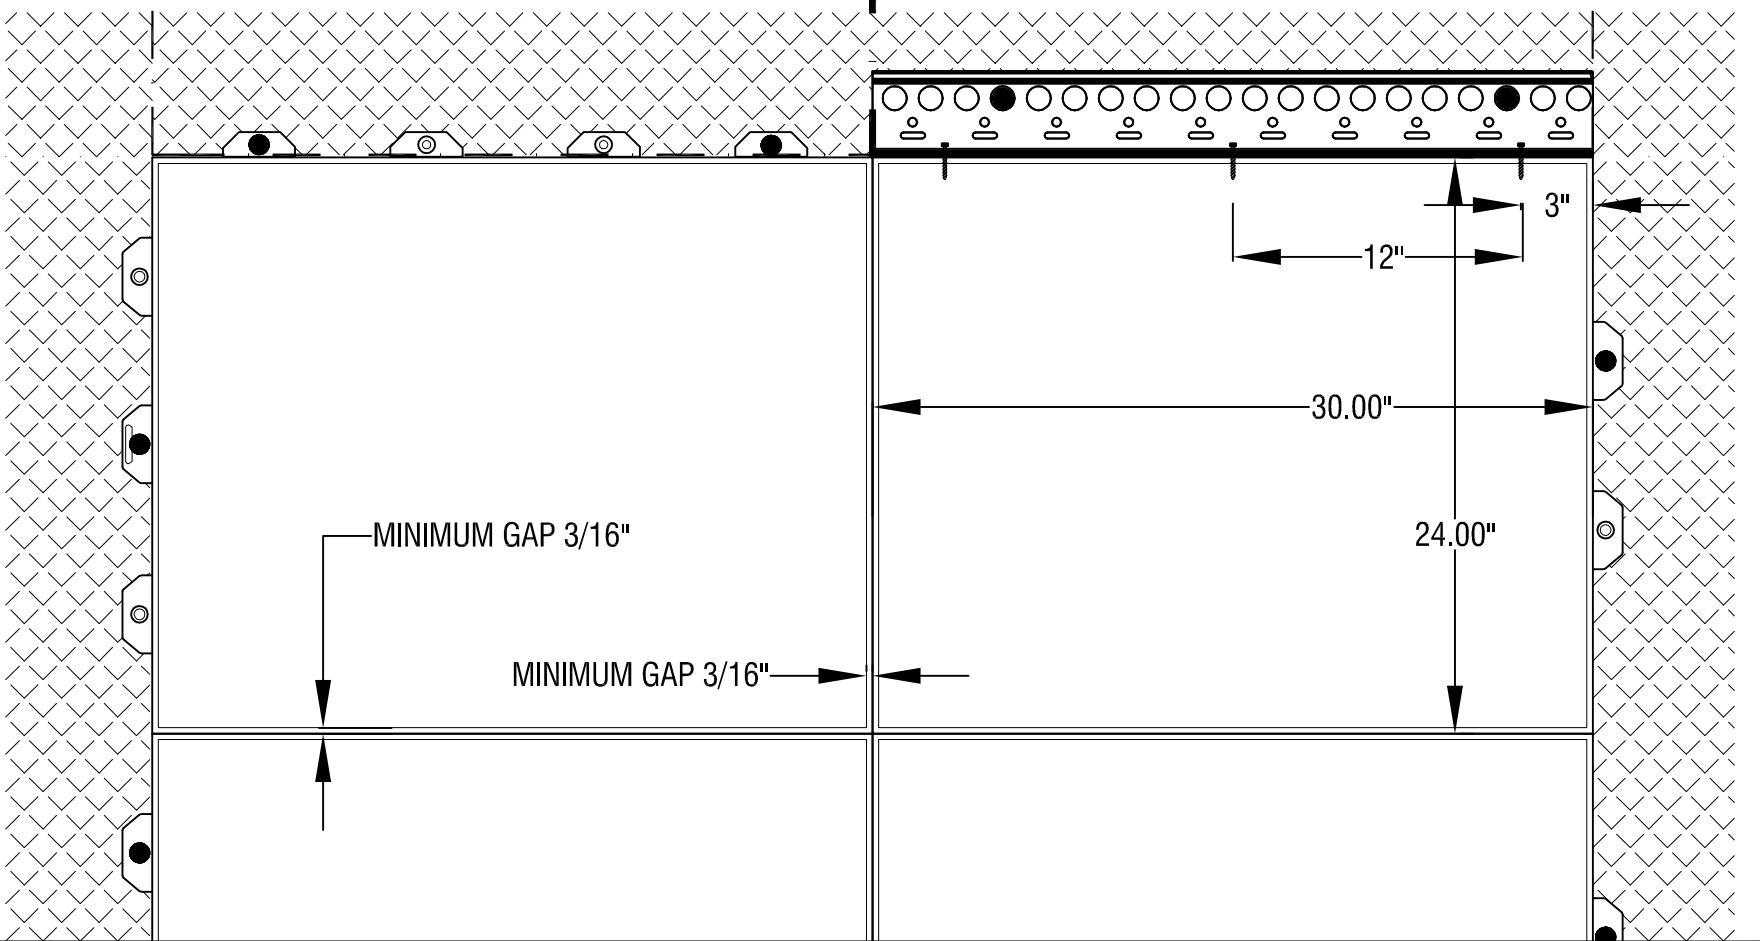

PAVERS  
AT FULL SIZE  
Scale: 1-1/2" = 1'-0"



**TERREWALKS®**

Typical Installation when pavers end at new  
hardscape: