


FIVE FOOT CONCRETE SIDEWALK NEW POUR WHEN
TERREWALKS® PAVERS HAVE BEEN CUT

A-- Use dowels drilled into pavers
(in conditions needing some extra stability)

B-- Use restraints and pour over them
(in conditions needing most extra stability)

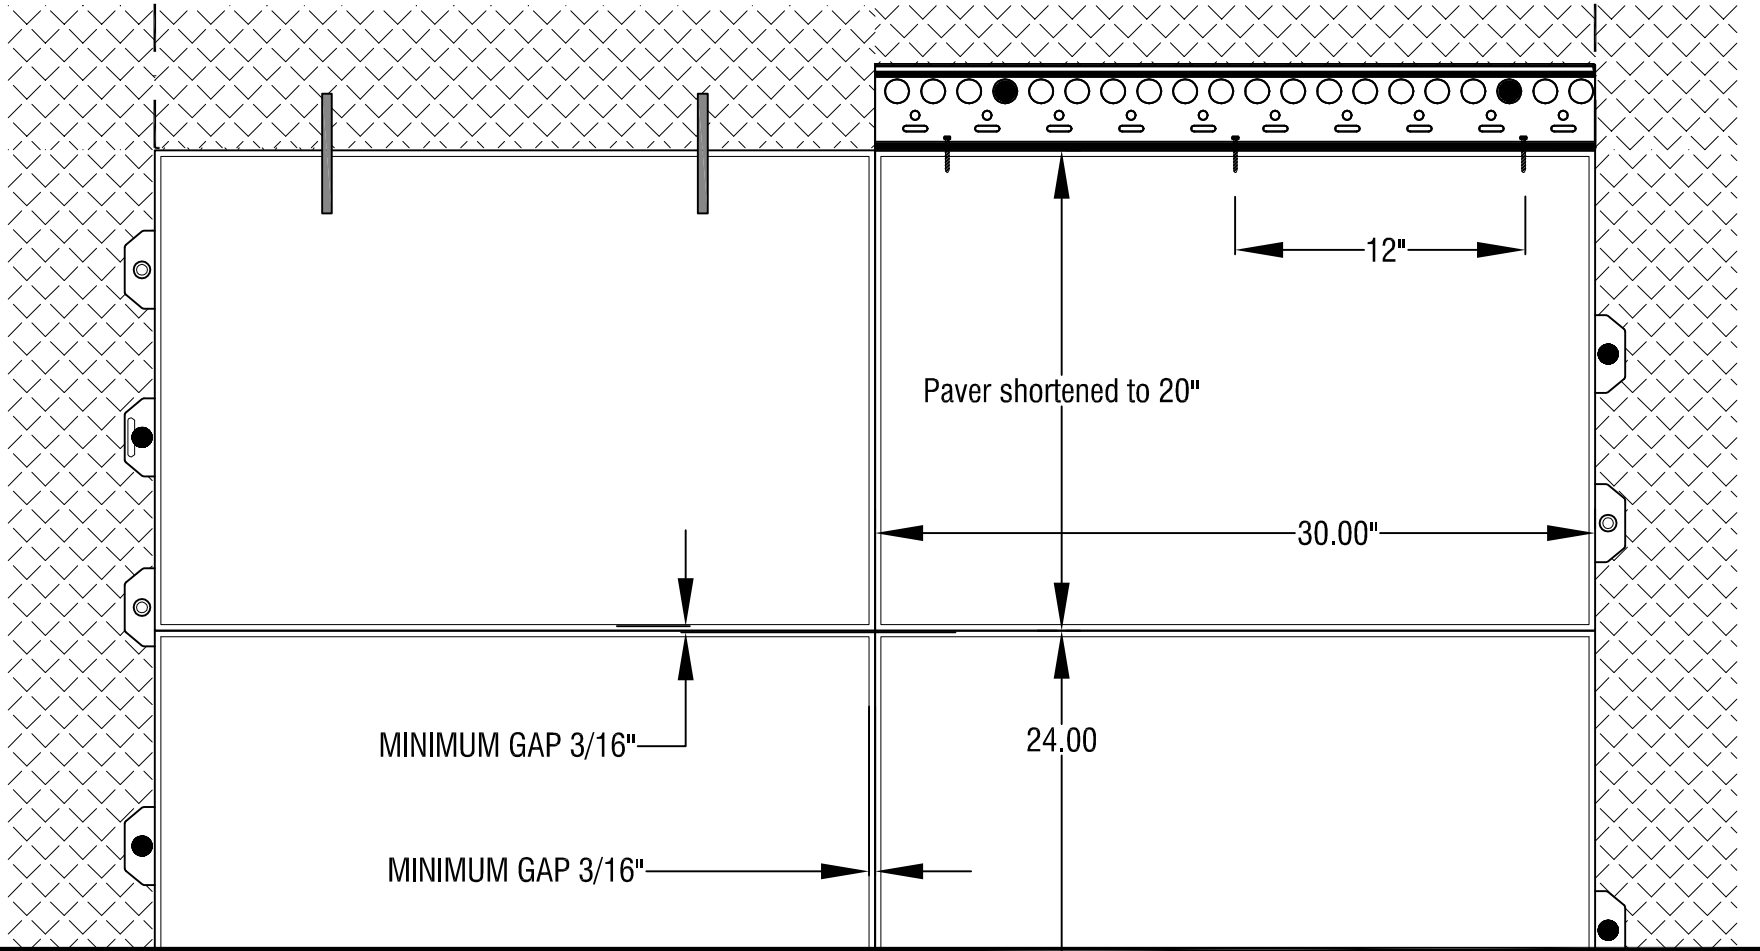


PAVERS ARE CUT
Scale: 1-1/2" = 1'-0"

FIVE FOOT CONCRETE SIDEWALK NEW POUR
ABUTTING TERREWALKS® FULL SIZE

A-- Leave the tabs and pour over them
(in normal conditions)

B-- Use restraints and pour over them
(in conditions needing extra stability)

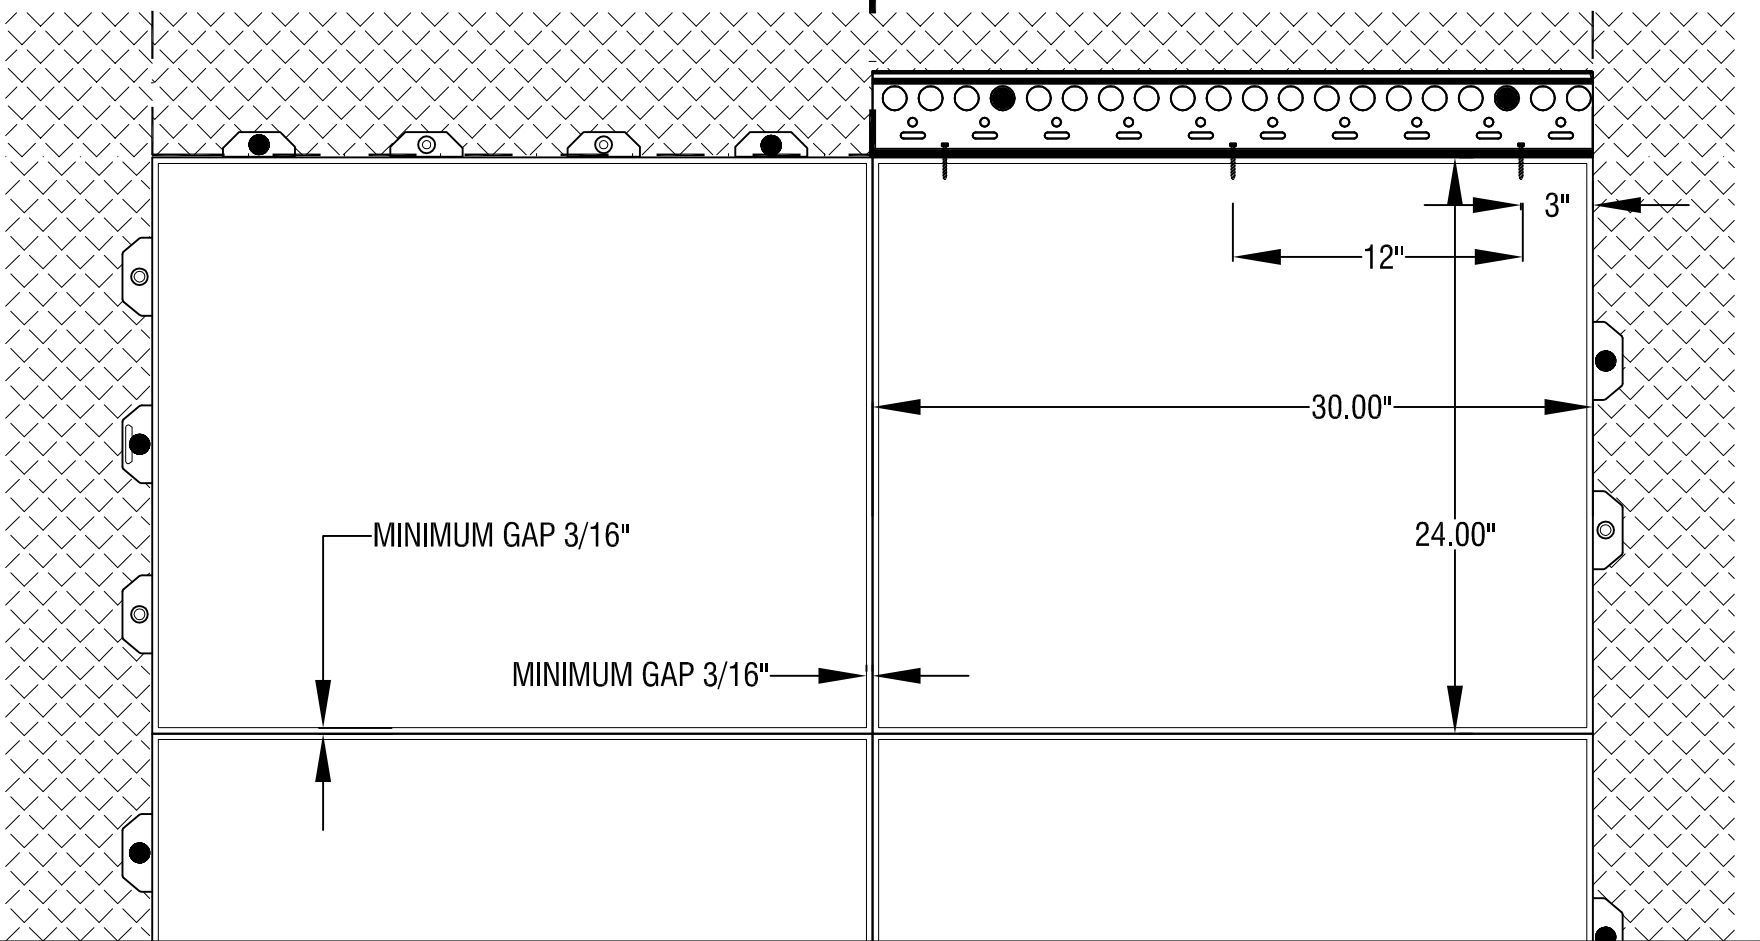

PAVERS
AT FULL SIZE
Scale: 1-1/2" = 1'-0"



TERREWALKS®

Typical Installation when pavers end at new
hardscape: